



HP Omni 10 Micro Card Reader Board Replacement

How to remove and replace a micro card reader board.

Written By: Alex Miller



INTRODUCTION

 
Using a spudger and a 00 Phillips head screwdriver, this guide will show how to remove a web camera from an HP Omni 10 tablet in roughly 2 to 4 minutes.



TOOLS:

- [64 Bit Driver Kit](#) (1)
-


Step 1 — Battery

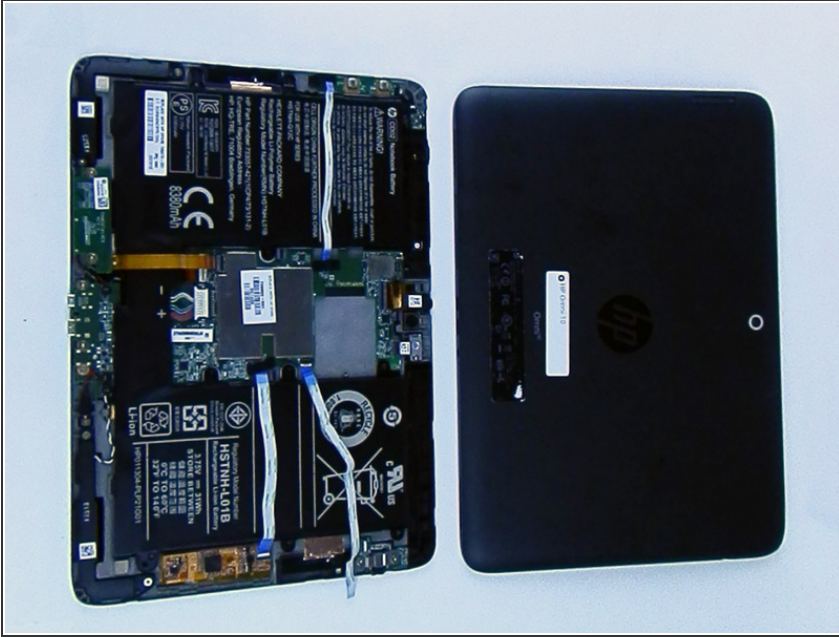

- Remove the back cover from the tablet.

i The cover is securely fastened to the device and may be difficult to remove.

 Step 2

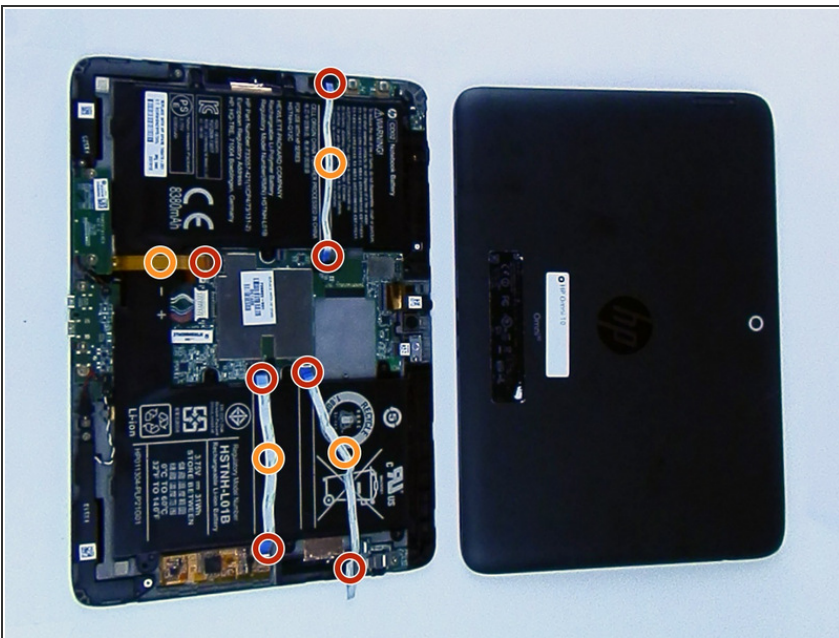

- Push the black plastic security flaps into an upward position.
- Lift the small tab on the security strips up and peel them across the battery. They will be attached via adhesive.
- Lift the tab on the strip up and pull it across the battery.

i The orange strip does not fully detach from the tablet like the other three. It will only detach from one side.

Step 3



 
- Unscrew the ten 3.3 mm screws securing the battery using a 00 Phillip's head screwdriver.

Step 4



- Unhook the cord from the edge of the battery.
- Pull the wire circuit out and down.

Step 5

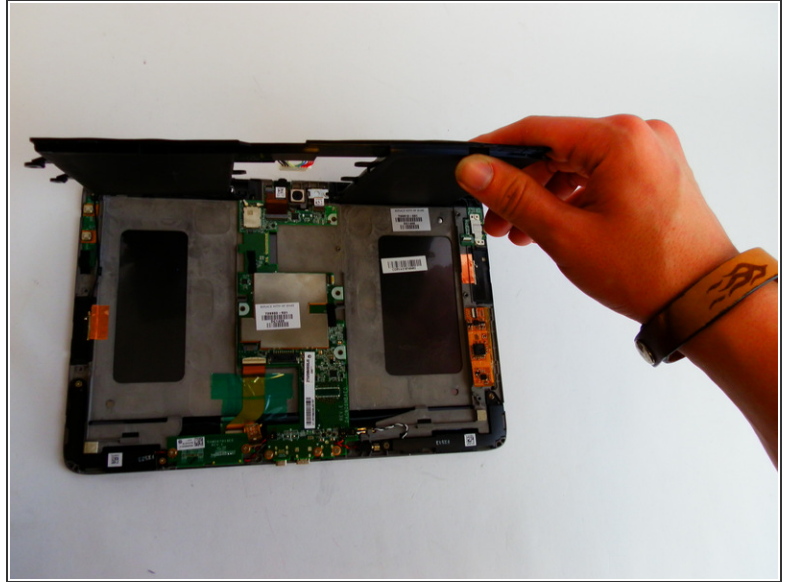


- Lift the battery up by its edges and remove it carefully. There will be adhesive holding the battery down.

Step 6 — Micro Card Reader



- Unscrew the two 3.3 mm screws using a 00 Phillip's head screwdriver.

 Step 7

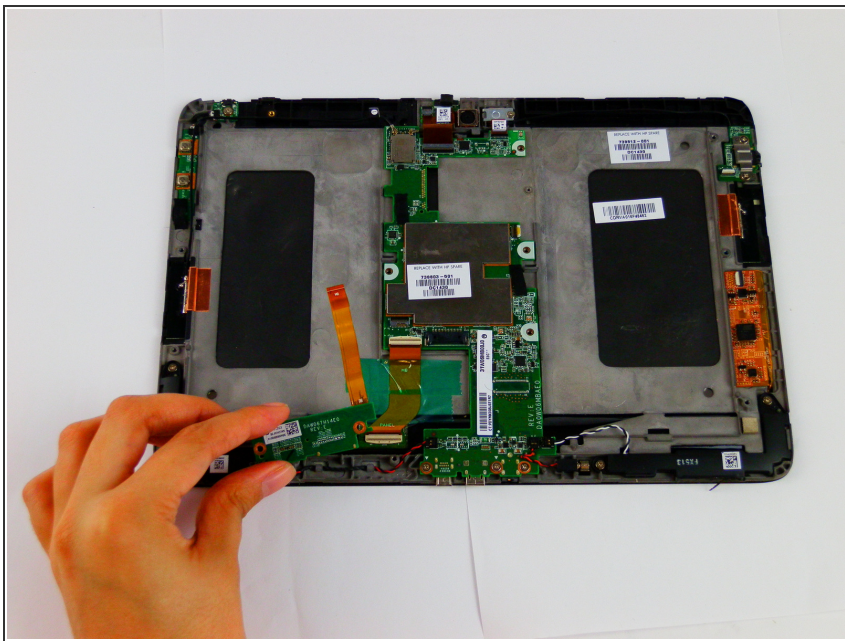

- Lift and remove micro card reader board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:48:03 PM.